


Moki EXO Buds Bluetooth Earphones

OVERVIEW / CONTENTS

- Moki EXO Buds Bluetooth Earphones
- USB to MicroUSB charge cable
- User Guide

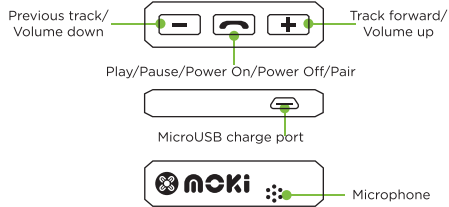

CHARGING

Please charge earphones before first use

Connect the supplied charge cable to a USB port on a PC or USB charge adaptor. Confirm orientation and connect the MicroUSB to the port on your earphones.

The LED on the earphones will glow solid RED indicating the earphones are charging. Depending on the power of the charge port used, charge time will be 2-4hrs.

When earphones are fully charged the LED will turn off. Disconnect charge cable.

Note: Earphones will not work if charge cable is still connected.



PAIR WITH BLUETOOTH DEVICES

You must pair your Moki earphones with a **Bluetooth** device before it can be used wirelessly.

You only need to pair your earphones to each play device once. They will automatically reconnect to each device when turned on in their vicinity. If two or more devices are available, the last device paired will be the one that reconnects.

FIRST TIME USE / PAIR TO NEW DEVICE

On your *Bluetooth* play device go to
•"Settings" >> "Bluetooth" - turn on *Bluetooth*

Play device should automatically start searching for new play devices. (Some older players may require you to select "search for / add new device")

•With the earphones off, HOLD the "Play / Pause button for about 7 seconds until the LED starts blinking RED / BLUE which indicates it is now searching for a new *Bluetooth* device.
(If earphones do not pair with a new device within 90 seconds they will enter "Standby mode")

•On your phone or play device under "*Bluetooth*" you will see Moki EXO listed under "Available devices"

•Select "Moki EXO" on your device to pair your earphones (older devices may require a code to complete pairing. Enter "0000" if requested).

•When pairing is successful the LED on your Moki EXO Buds *Bluetooth* Earphones will glow solid blue.

Moki EXO Buds *Bluetooth* earphones may be paired to PCs and laptops with *Bluetooth* capability. Go to your computers' *Bluetooth* settings and follow the prompts to connect in a similar way as described above. After pairing ensure the "Sound Output" is set to "Play through *Bluetooth*", (not "Internal Speakers"). Some computers may require *Bluetooth* audio output to be enabled each time you connect.

SPECS

Speaker diameter: Ø8mm
Impedance: 16Ω
Sensitivity: 99dB @1KHz
Rated power: 4.6mW
Frequency response: 20Hz-2000Hz

Bluetooth Mode:

Bluetooth Version: Version 4.1+EDR
Remote control to the player: Volume up and down, Previous/Next, Pause/Play
Range: 10m
Frequency response: 20Hz - 20,000Hz
Play time: Approximately 3 hours
Standby time: Approximately 100 hours